

EMBOUT P/CROSSE

Spigot for Bracket



$\phi 60$

EF - 08/12/2010


EMBOUT P/CROSSE







Spigot for Bracket

\varnothing 60

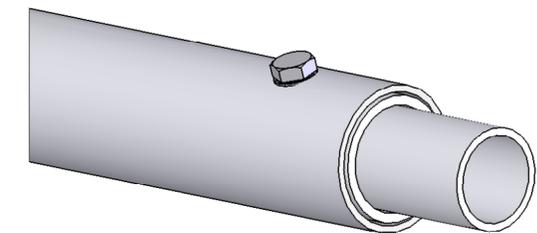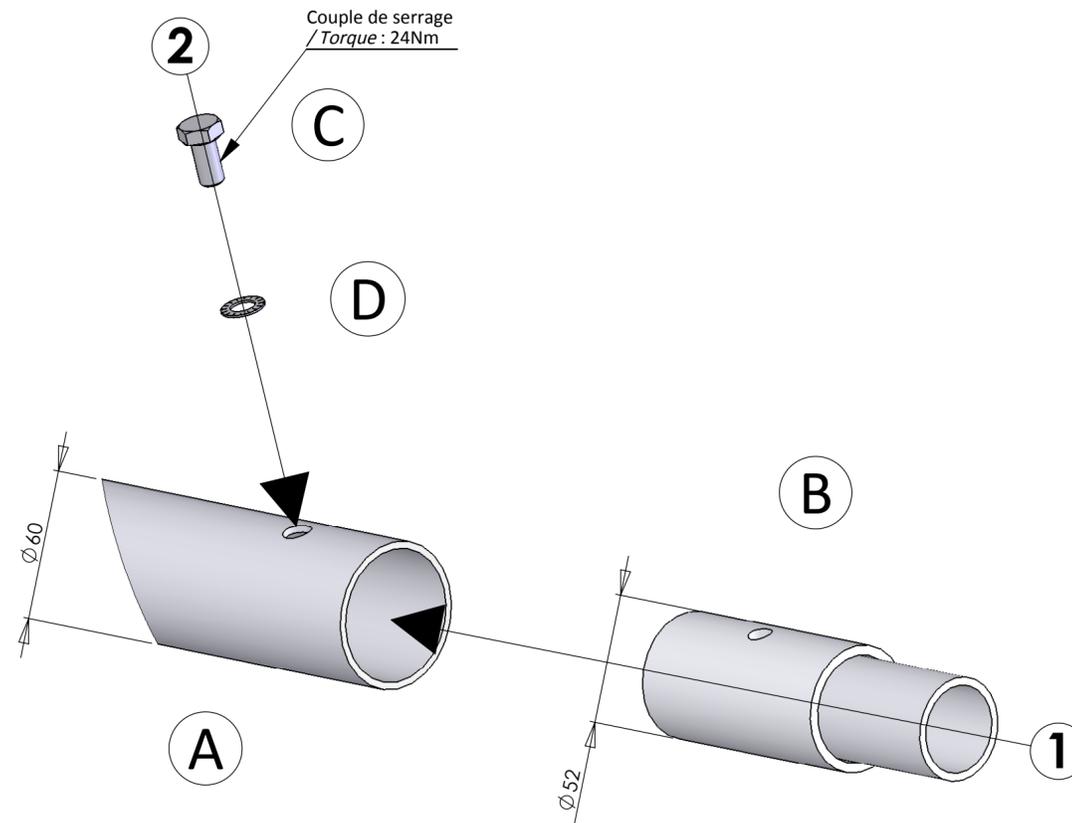


1-2





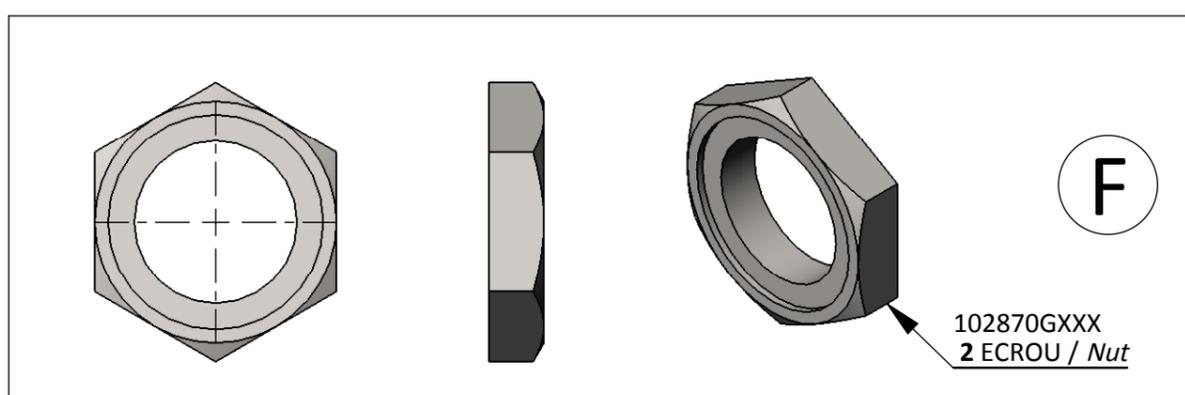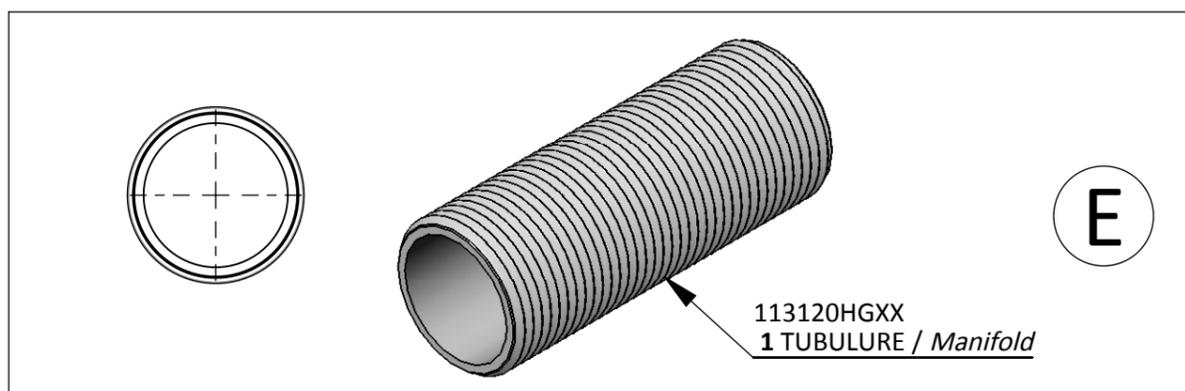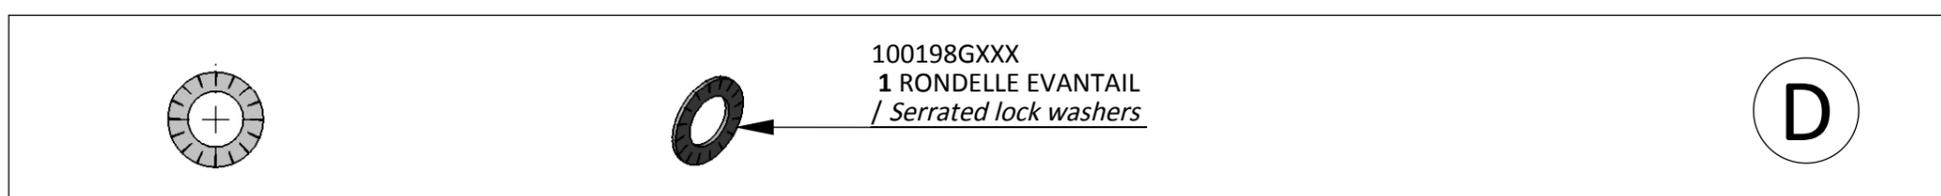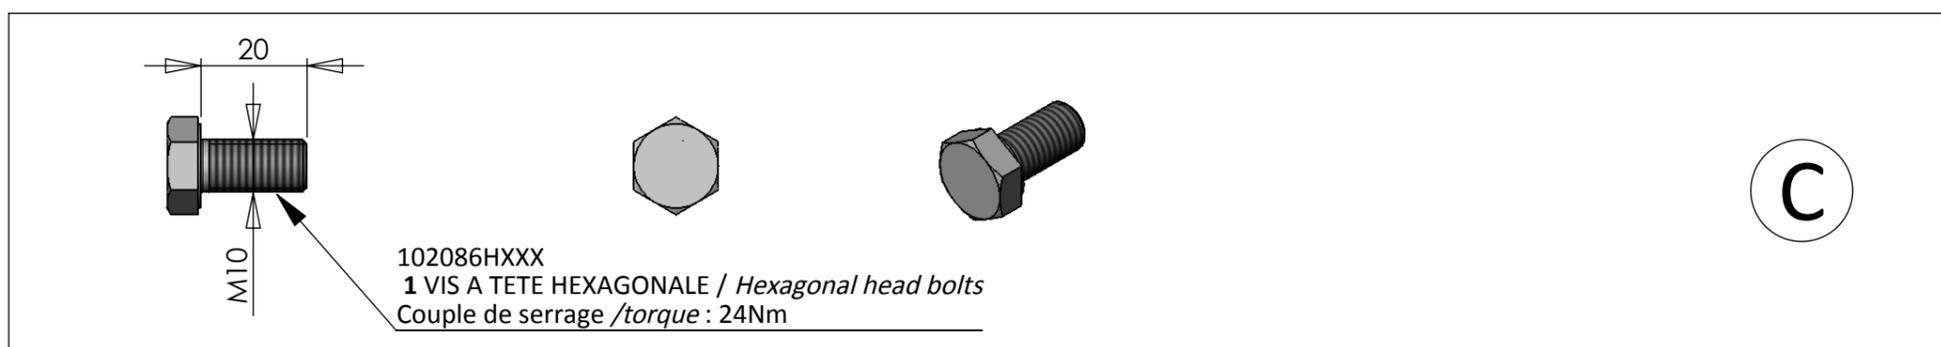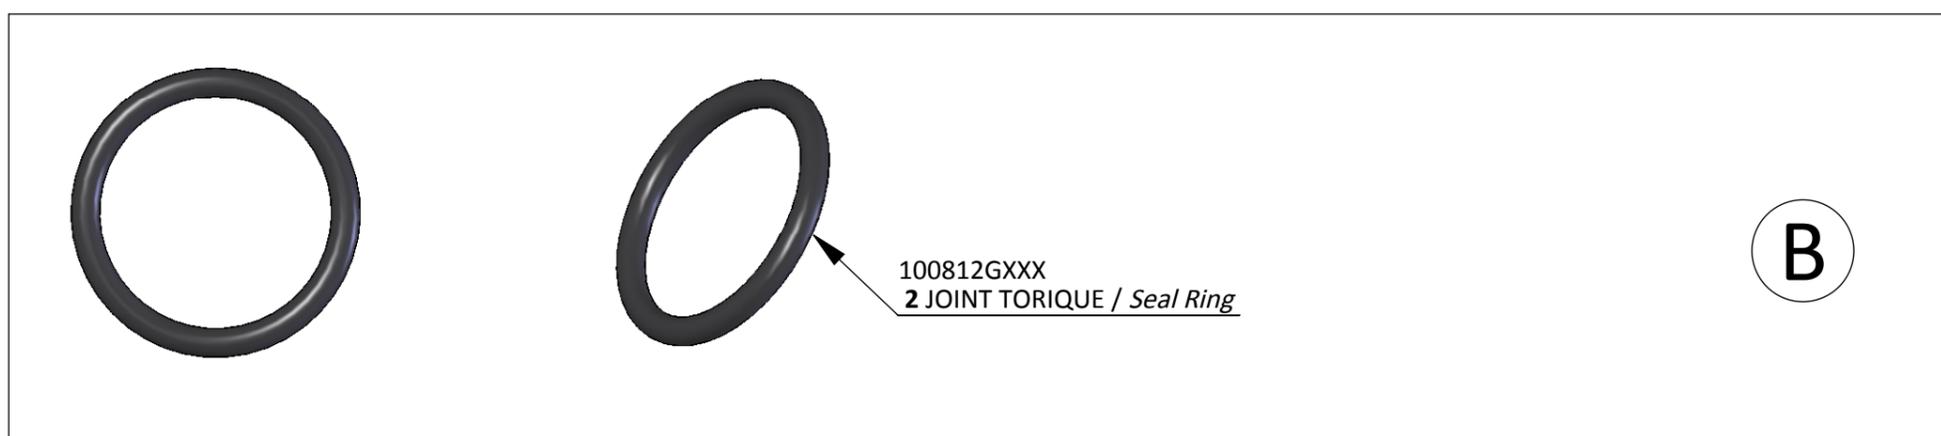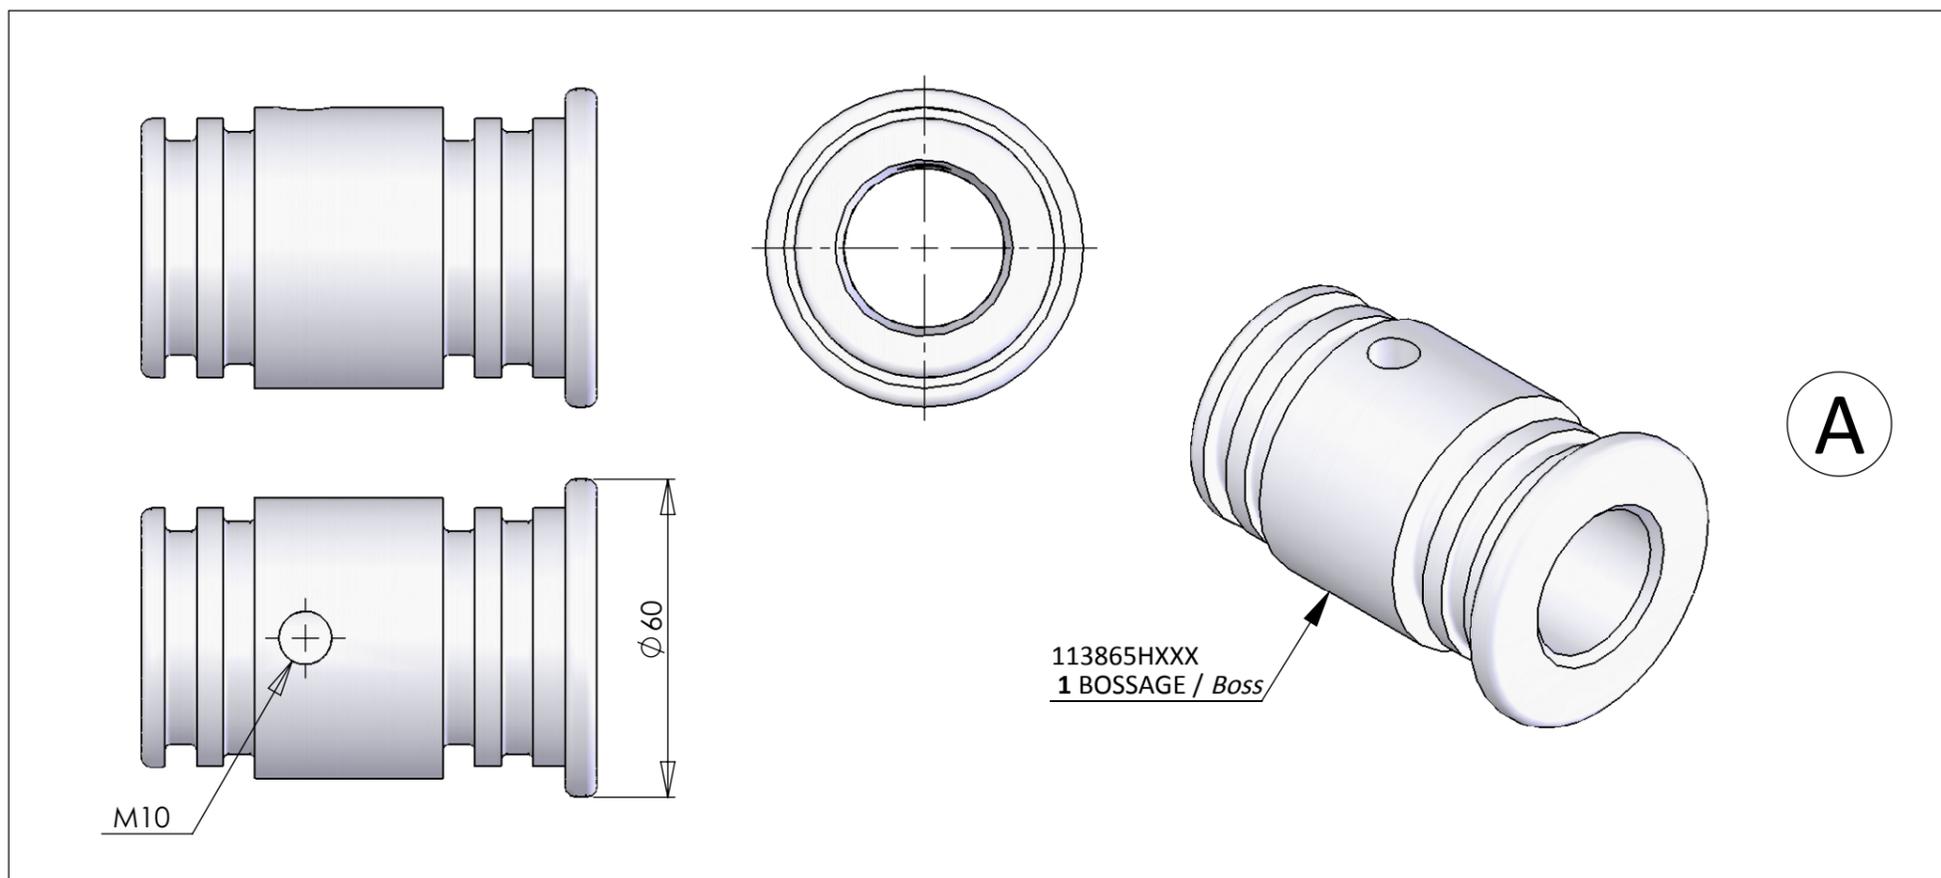



BOSSAGE
G1" (34PDG)
Boss
Ø **60**

EF - 30/07/2010




BOSSAGE
G1" (34PDG)
Boss -  **60**

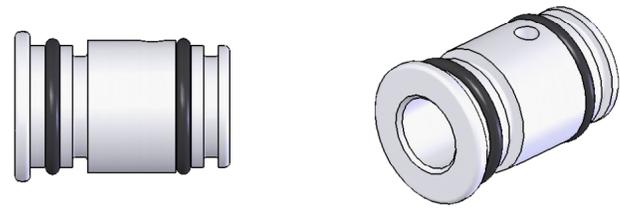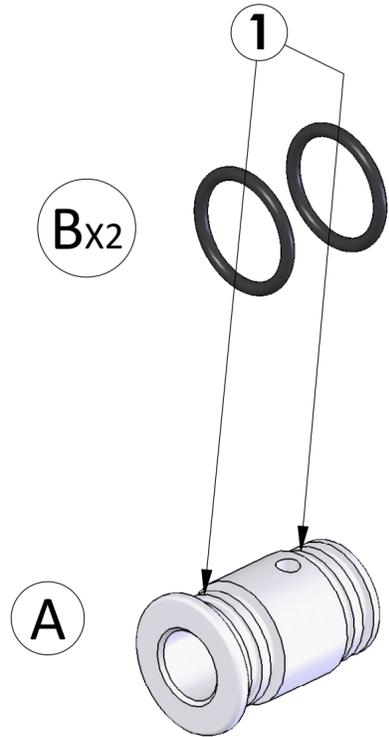


1





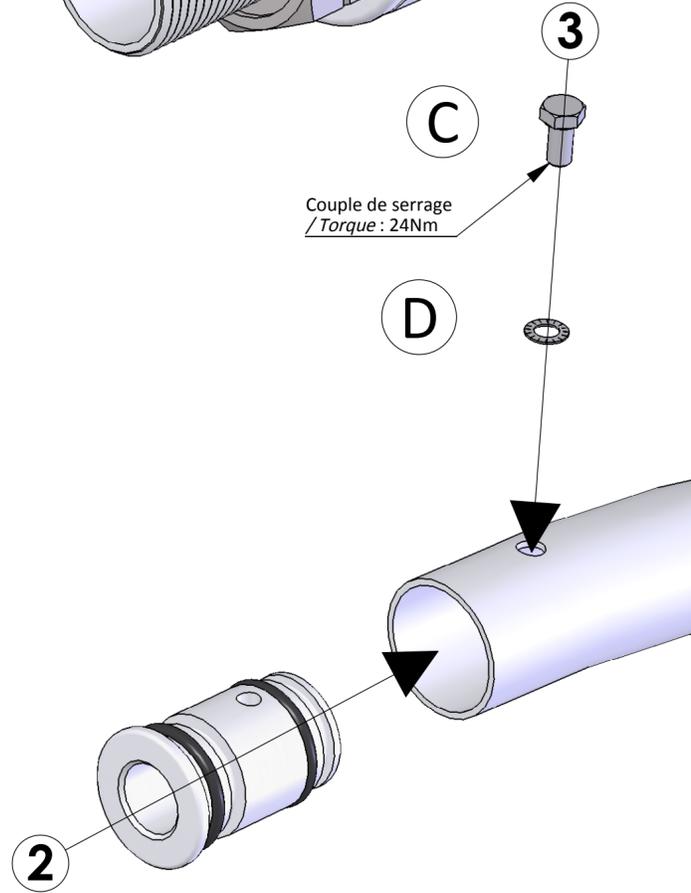
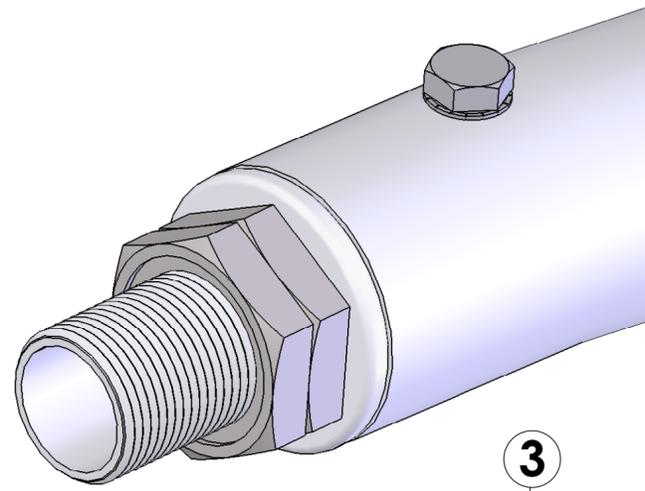


2-3

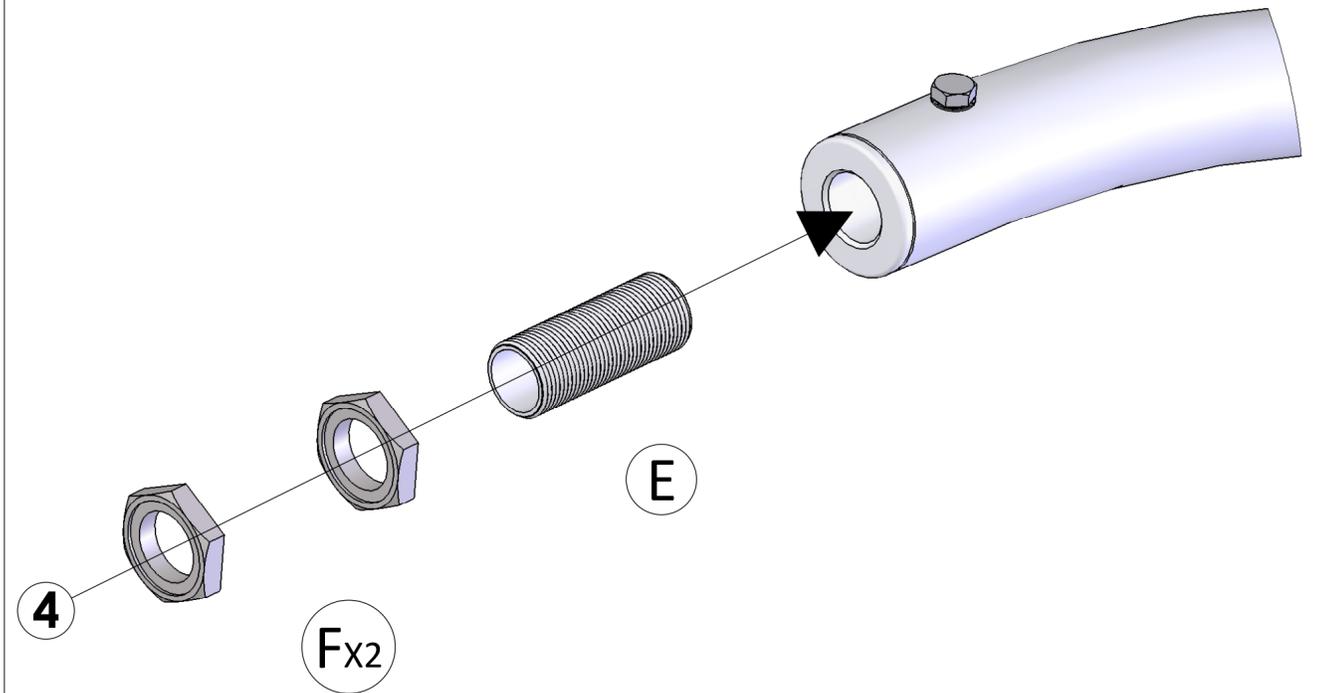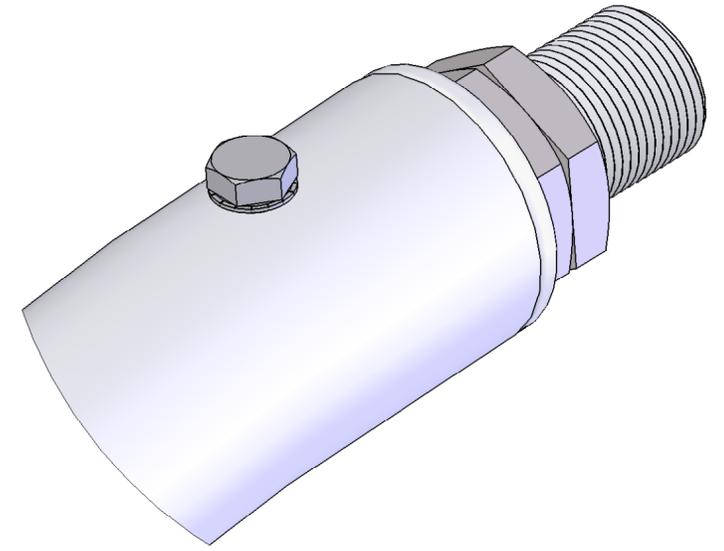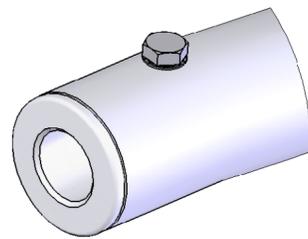

4

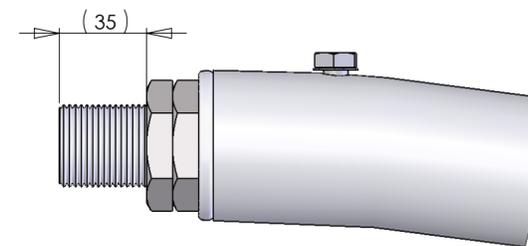


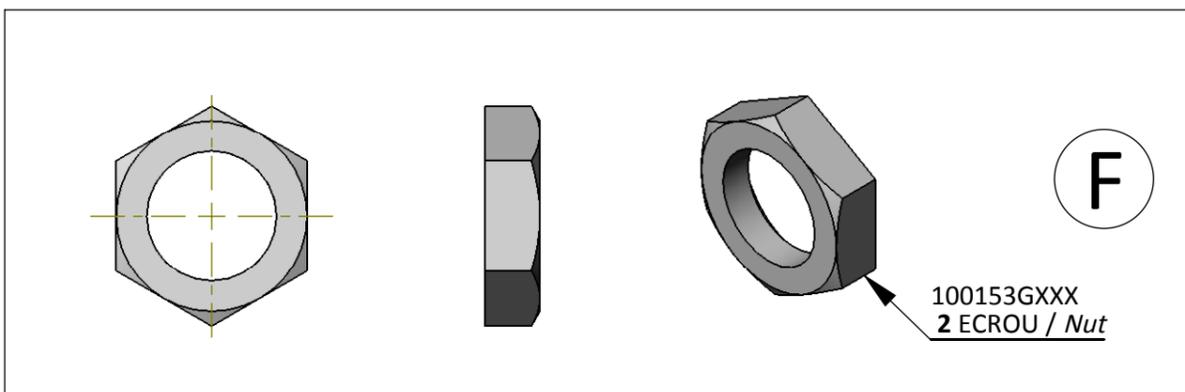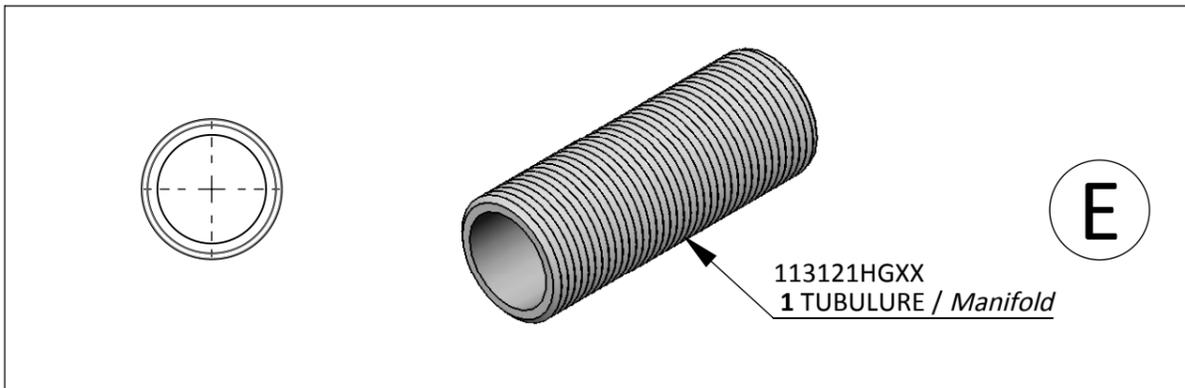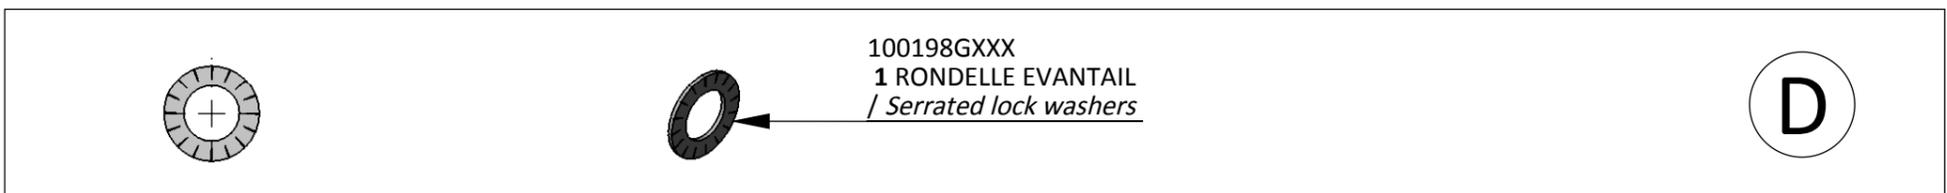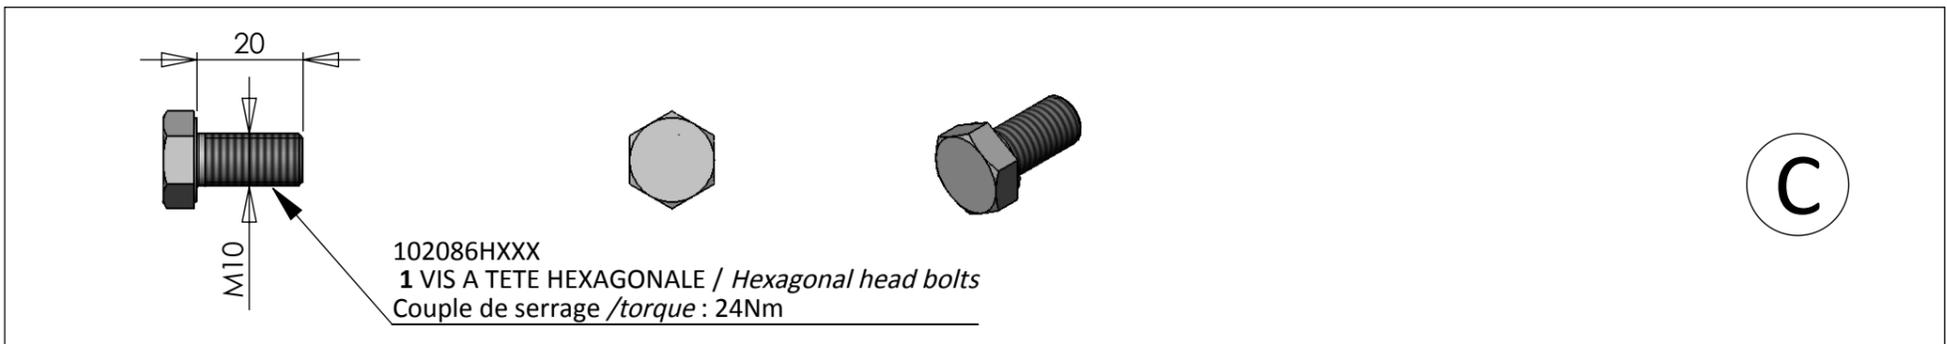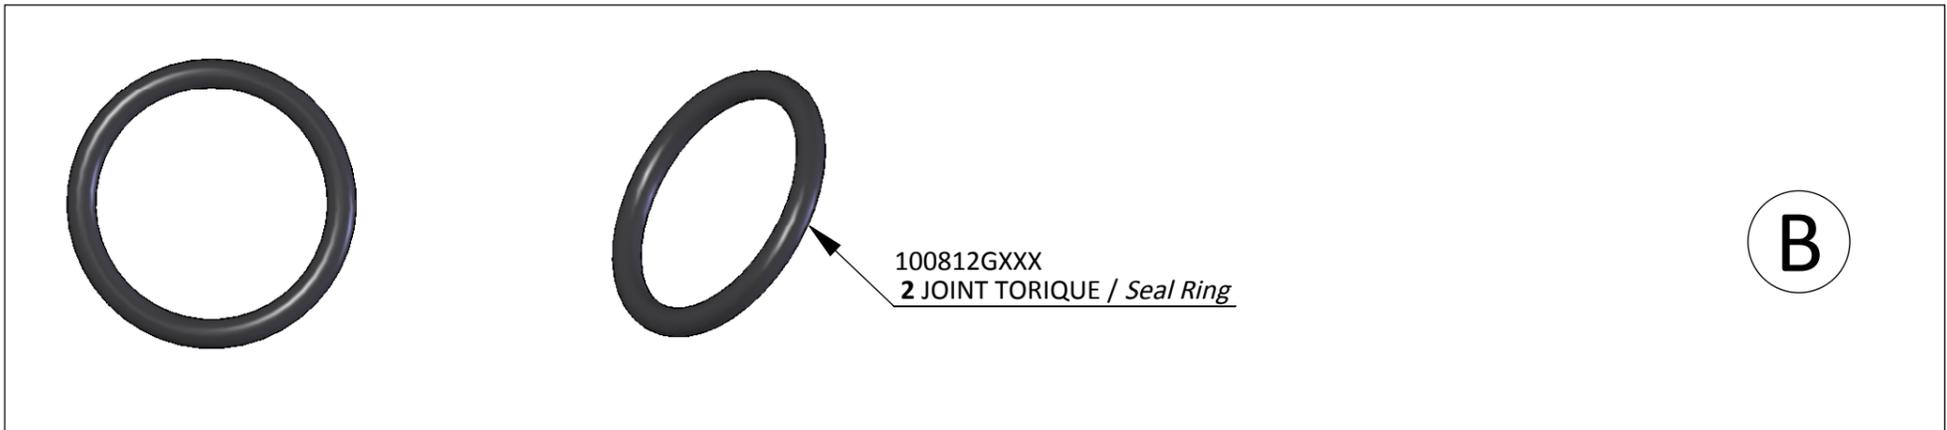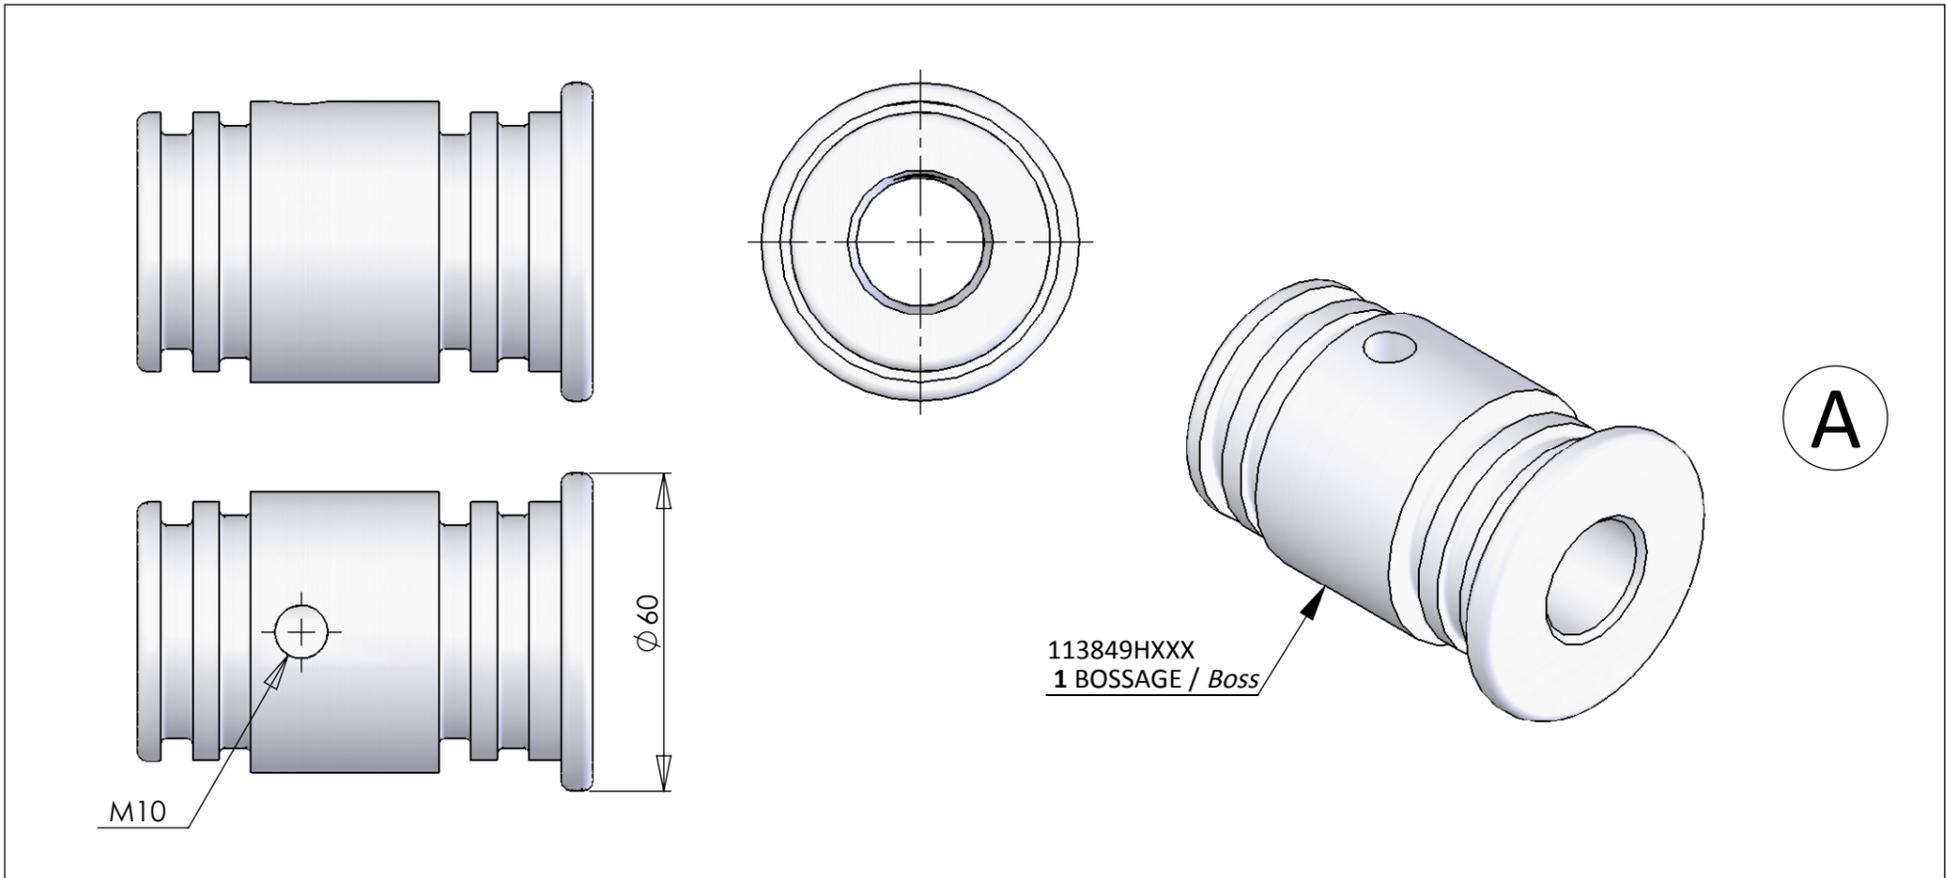



BOSSAGE
G3/4" (27PDG)
Boss
 ⌀ **60**

EF - 30/07/2010



BOSSAGE
G3/4" (27PDG)
Boss -  **60**

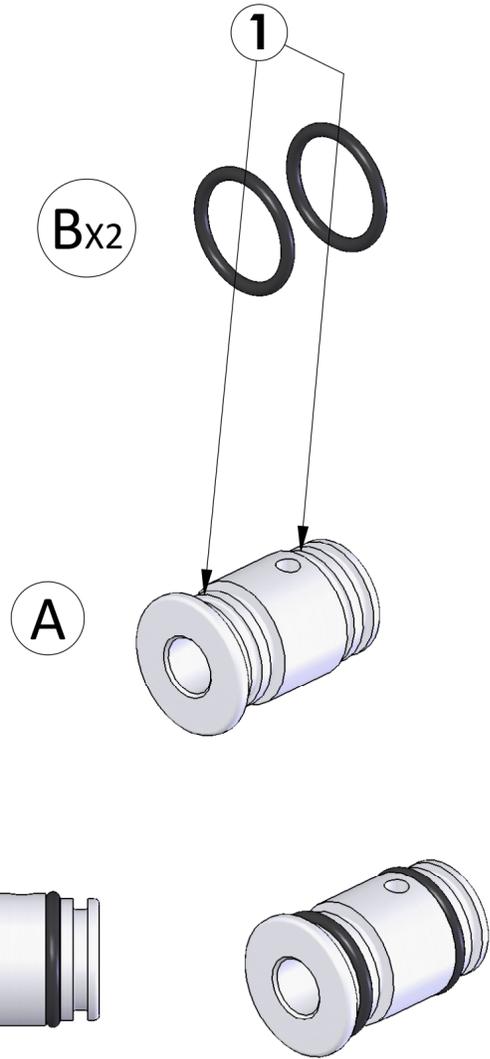

1

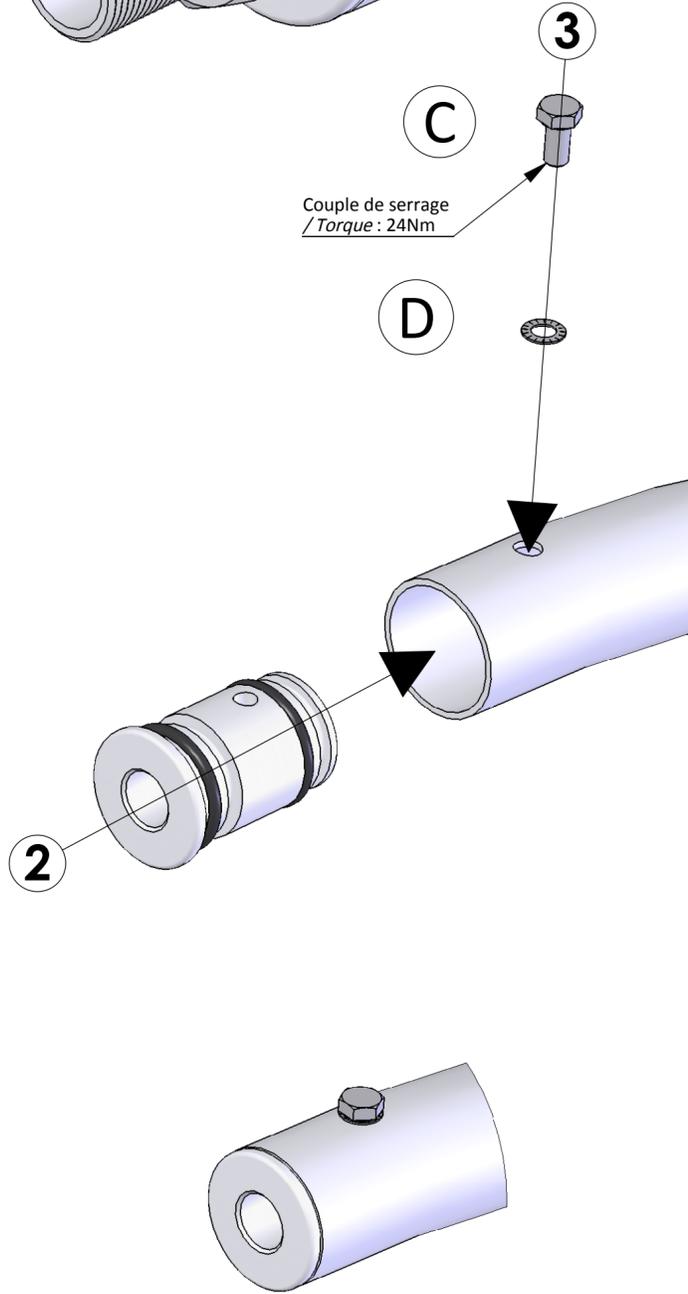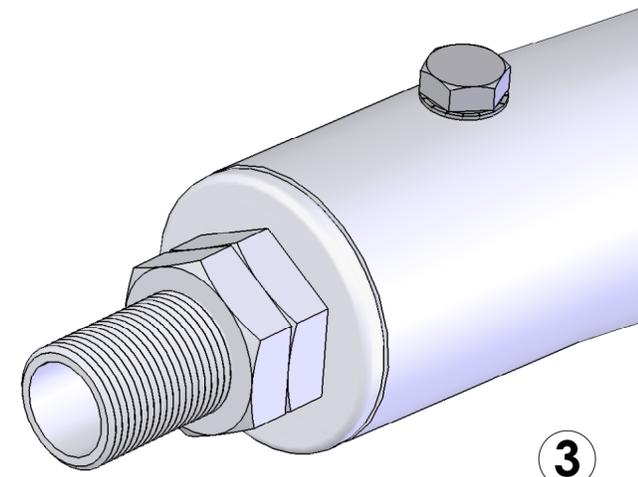

2-3

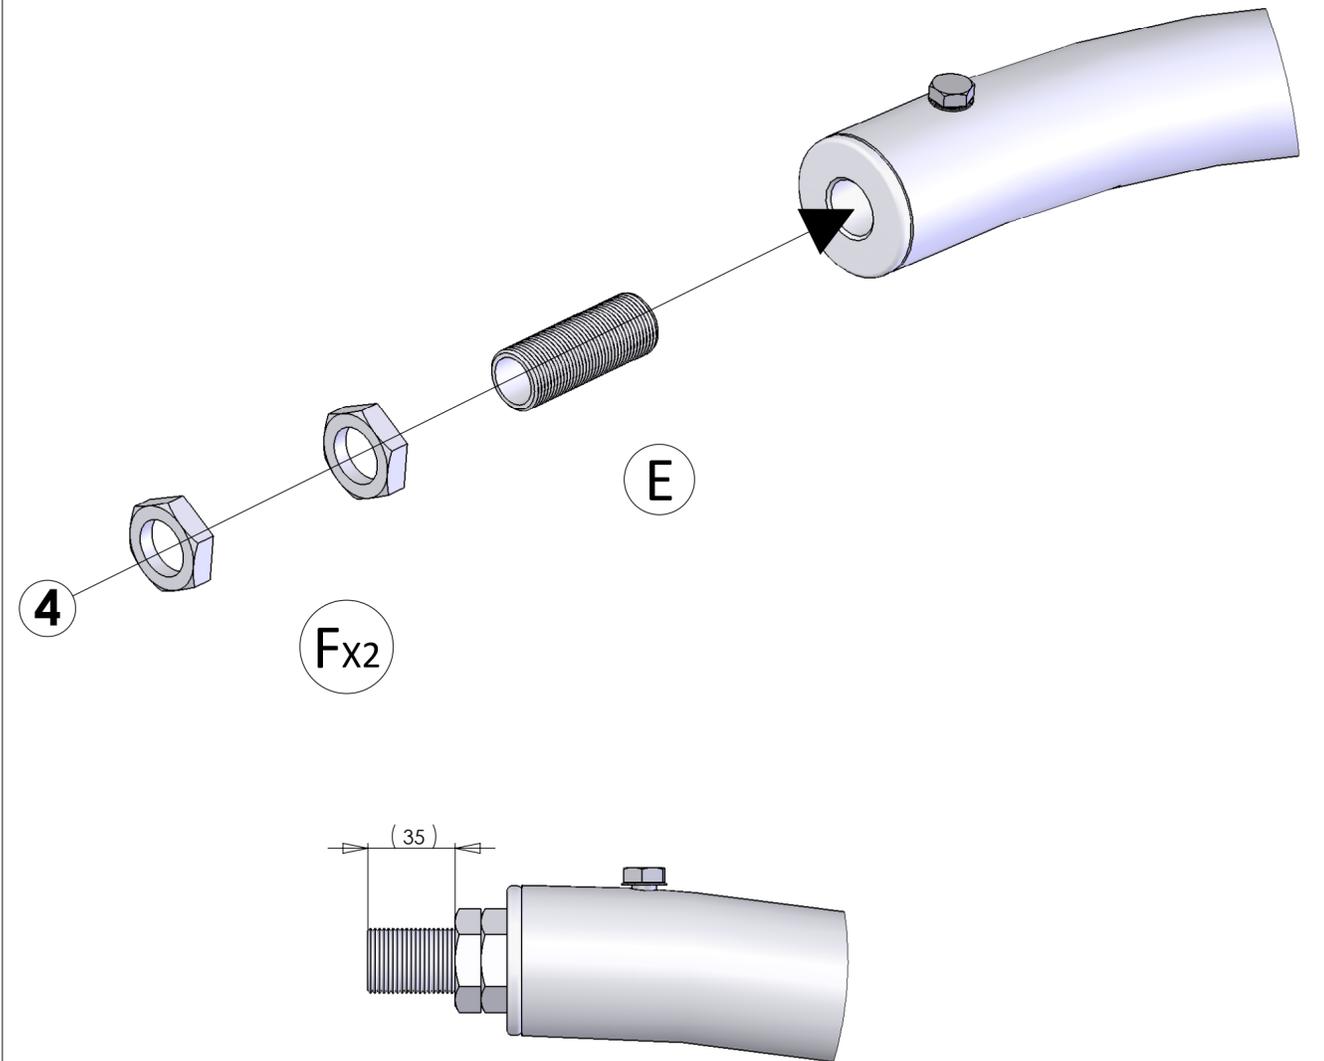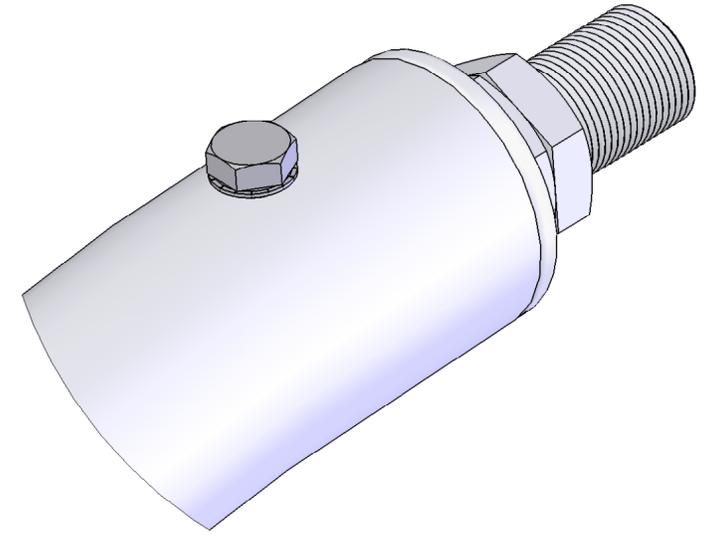

4